


All Glass Door Handle


installation instructions

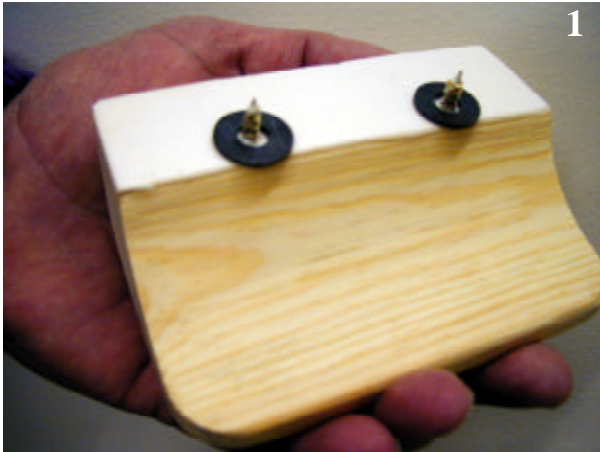


Your door handle package includes...

- Two handles (interior & exterior)
- Two 2-1/2" torx screws
- Two rubber washers
- Two wood hole plugs

1 Screw the two screws into the interior handle so they protrude approximately 3/4" out the other side. Place your washers over the screws.

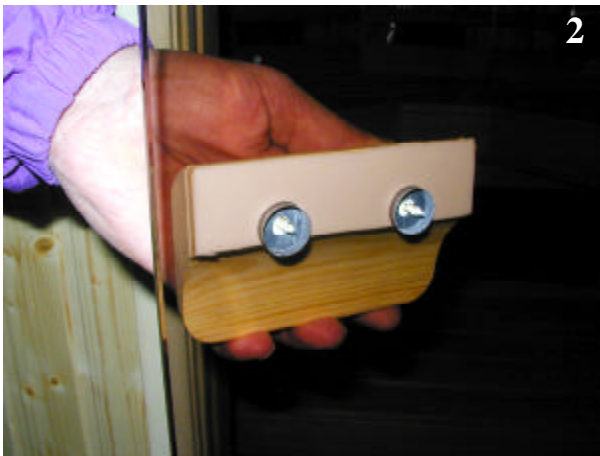

2 Place this handle on the interior of the door aligning your washers on the door handle holes. **NOTE:** The washers fit snugly into the holes and prevent the screws from coming into contact with the glass door.

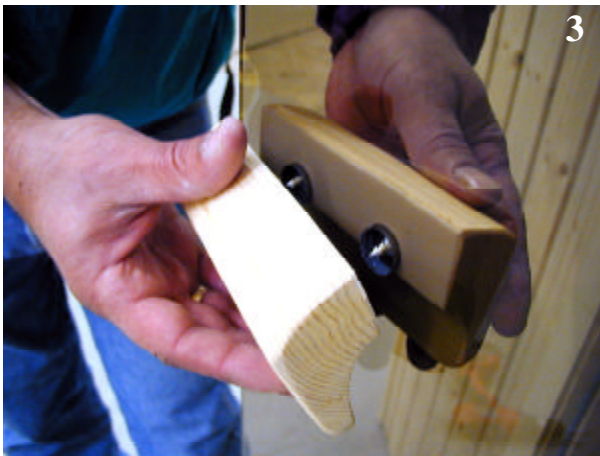

3 Align the pre-drilled holes of the exterior handle onto the screws protruding through the interior handle holes.

4 Using a torx bit, screw the 2 handles together till they are snug.

5 Fill the holes on the interior handle with the provided wood plugs.

