



Northern Star

a d d e n d u m

Use this addendum as a supplement to your Panel Built Instructions. It outlines additional assembly procedures unique to this sauna.

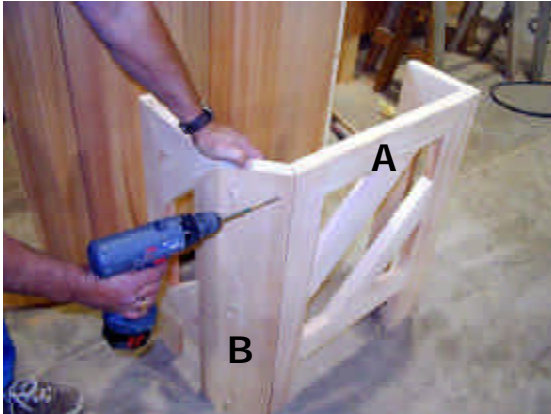

1. Assemble the 2-piece heater guard using three 3-inch screws provided in hardware kit.
2. Insert wood plugs to cover screw holes.

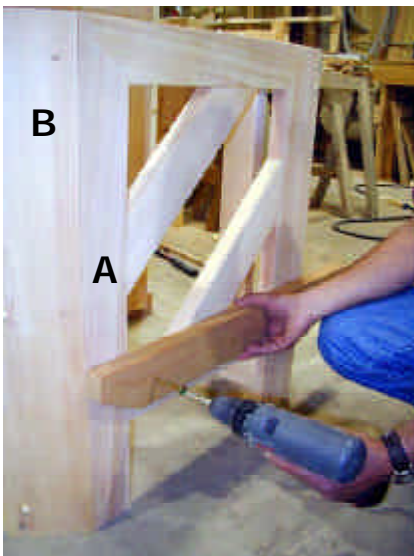

3. Attach the 30" lower bench support to heater guard as shown in the photo. A line has been penciled in on part A to line up the top edge of the support. The support should not extend horizontally beyond part A of the guard rail. Use 3" screws in the pre-drilled holes of the support.
4. Refer to the bench support section of the installation instructions and your room drawing for further details on where the rest of your bench supports should be placed. Penciled-in lines have been marked on wall panels showing the top edge of both your upper and lower supports.



5. Position your heater guard into the corner of the room as shown in photo. Refer to room layout drawing for exact placement.



6. Fasten light assembly to interior wall panels as shown in photo. Pencil lines have been marked to show placement.



7. Drill 1/2" hole just below light assembly in either of the 2 wall panels depending upon electrical outlet placement.

8. Feed light wires through the 1/2" hole and connect to low-voltage transformer.



9. Position neo-angle, interior wall in corner of room covering the light assembly. Pencil marks have been provided for proper alignment.



10. Using the provided finishing nails, attach the neo-angle wall to your wall panels.

NOTE: After benches have been installed, trim has been provided to give the neo-angle, interior wall a finished look.